



Innovators of Fitting Tools

DOG AND WEDGE



Before



After

Dog & Wedge Process

1. Weld U-Bar
2. Insert bull pin across plate seam
3. Belt with hammer to align plates
4. Tack weld plates together when level
5. Remove bull pin
- 6 Hammer & Grind off

BULL PIN

"Our Bull pins must pass numerous tests to be approved for sale. With our own chemistry and heat treating process we have created the toughest bull pin in the industry." - Romar
 12" x 1 1/4", 2" of flat tapering down to 7/16"



Part No	Description
BP-HT	Bull Pin

U-BAR


U-Bars are used for fitting floors on water tanks, taking out high-lows, or securing all types of lap and butt joints.
 5/8" x 5/8" x 6 1/2"



Part No	Description
UB-586	U-Bar Carbon Steel

GO MODERN

USE THE MAG PRY

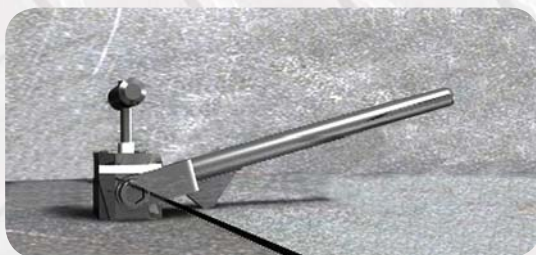

Turn on/off Magnet & Lever



- Simple & Quick to use
- No Tacking
- No Hammering
- No Grinding
- Saves Time

Part No	Description
MP70-1	Mag Pry 70 mm



INDEPENDENT WHOLESALE WELDING SUPPLY

Ph: 02 8834 2400 Fax: 02 8834 2498 Email: iwws@iwws.net Website: www.iwws.net